



FRONT PANEL

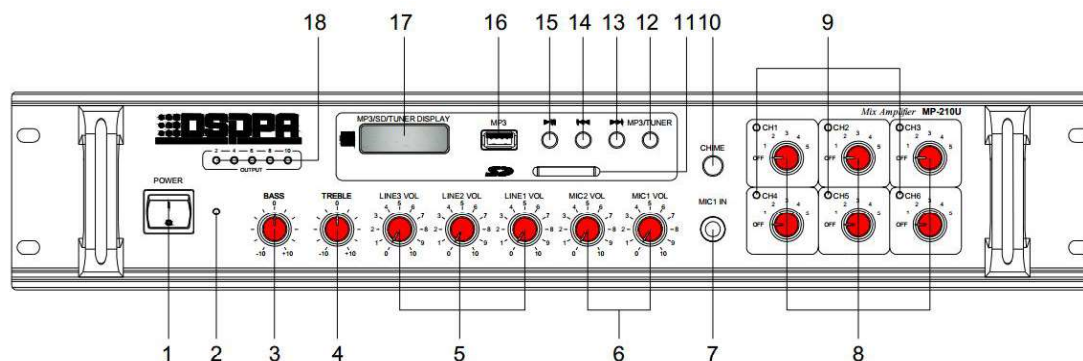


- | | | |
|---------------------------------------|-----------------------------------|---------------------------------------|
| 1 Power Switch | 10 Chime Button | 6 MIC Input Volume Adjustment Button |
| 2 LED Power Indicator | 11 MP3 SD Jack | 15 MP3/tuner status operation key |
| 3 Bass Adjustment Button | 12 MP3/tuner select key | 7 MIC 1 Priority Input Jack |
| 4 Treble Adjustment Button | 13 MP3/tuner status operation key | 16 MP3 USB Jack |
| 5 Line Input Volume Adjustment Button | 14 MP3/tuner status operation key | 8 Zone Volume Adjustment Button (1-6) |
| | | 17 MP3/tuner status display |
| | | 9 Zone Level Indicator |
| | | 18 Five-unit LED Level Mete |

REAR PANEL

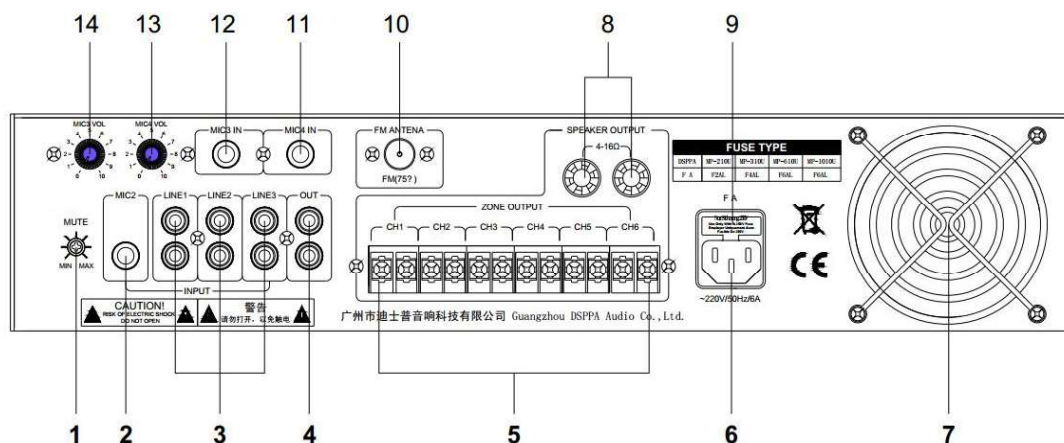


- | | |
|--|-----------------------------|
| 1 Mute control Button | 7 Fan Exhaust Window |
| 2 MIC 2 Input Jack | 8 Speaker Output Terminal |
| 3 Line Input Jack 1, 2, 3 | 9 AC Power Fuse |
| 4 AUX Output Jack | 10 FM antenna Jack |
| (Link with another amplifier or recording equipment) | 11 MIC4 Input Jack |
| 5 6-zone Output | 12 MIC3 Input Jack |
| 6 AC Power Source Insert | 13 MIC4 Input Volume Button |
| | 14 MIC3 Input Volume Button |

CONNECTIONS (without multi-zone outputs)

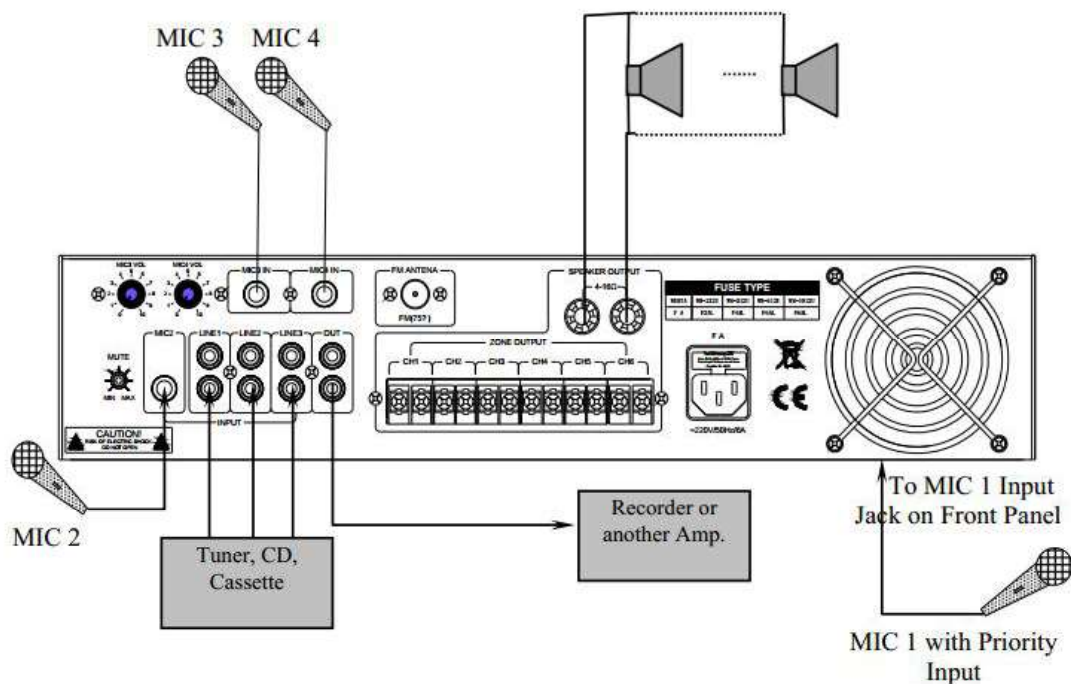

CONNECTIONS (with multi-zone outputs)

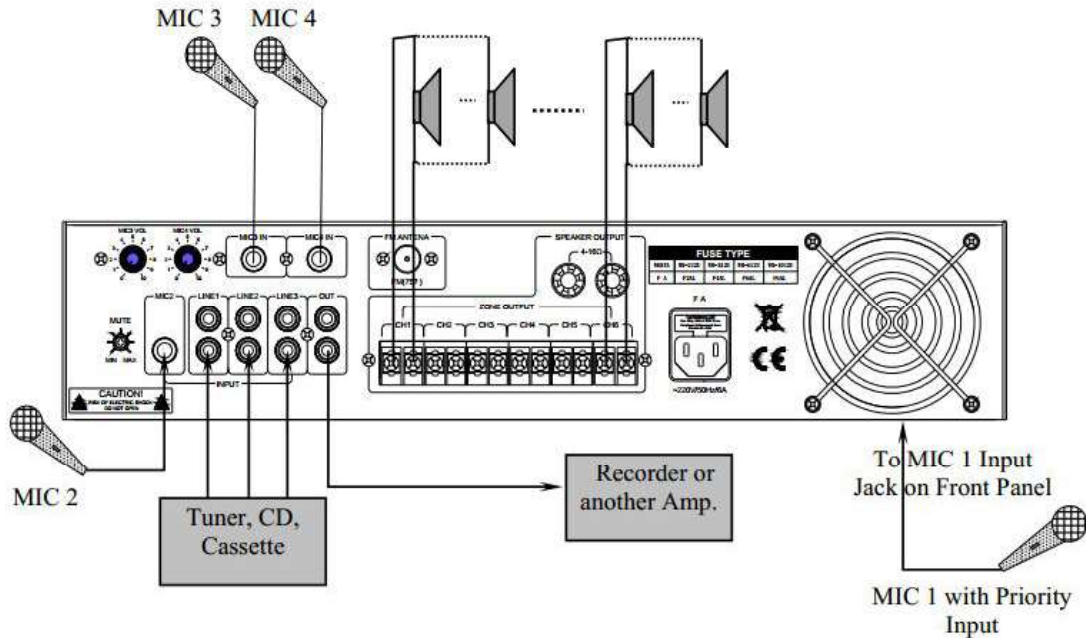

Note:

Individual zone opening and closing may be achieved by adjusting **Zone Volume Adjustment Button** on **Front Panel**.