
ARCS® WIDE SYSTEM ARCS® FOCUS SYSTEM RIGGING MANUAL

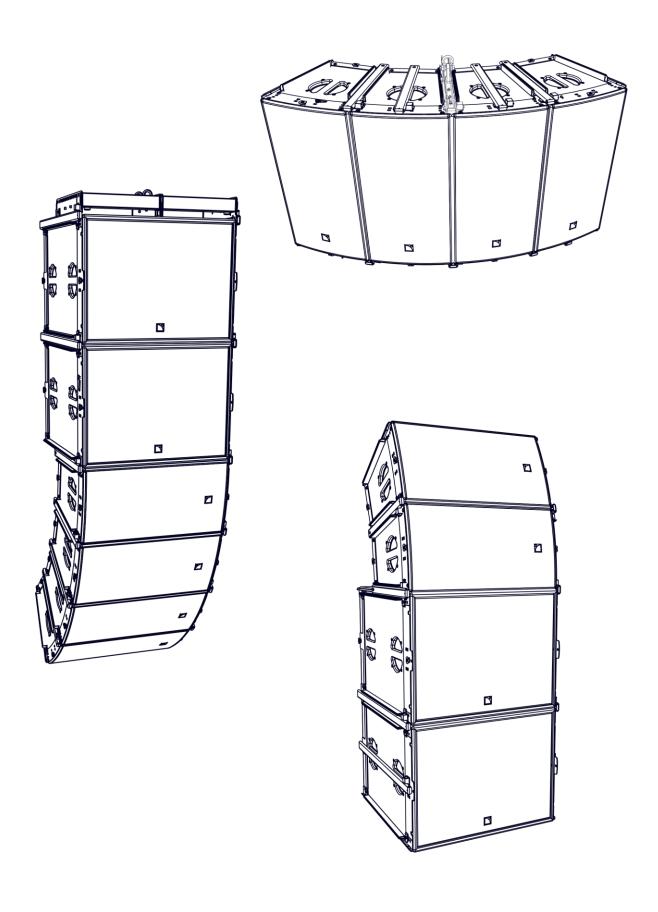

VERSION 3.0



VERSION 3.0

SAFETY INSTRUCTIONS

- I. Read this manual
- 2. Follow all SAFETY INSTRUCTIONS as well as DANGER and OBLIGATION warnings
- 3. Never incorporate equipment or accessories not approved by L-ACOUSTICS®

4. Read all the related PRODUCT INFORMATION documents before exploiting the system

The product information document is included in the shipping carton of the related system component.

5. Work with qualified personnel for rigging the system

Installation should only be carried out by qualified personnel that are familiar with the rigging techniques and safety recommendations outlined in this manual.

6. Ensure personnel health and safety

During installation and set-up personnel must wear protective headgear and footwear at all times. Under no circumstances personnel is allowed to climb on a loudspeaker assembly.

7. Respect the Working Load Limit (WLL) of third party equipment

L-ACOUSTICS® is not responsible for any rigging equipment and accessories provided by third party manufacturers. Verify that the Working Load Limit (WLL) of the suspension points, chain hoists and all additional hardware rigging accessories is respected.

8. Respect the maximum configurations and the recommended safety level

For safety issue, respect the maximum configurations outlined in this manual. To check the conformity of any configuration in regards with the safety level recommended by $L-ACOUSTICS^{\otimes}$, model the system in SOUNDVISION and refer to the warnings in **Mechanical Data** section.

9. Be cautious when flying a loudspeaker array

Always verify that no one is standing underneath the loudspeaker array when it is being raised. As the array is being raised, check each individual element to make sure that it is securely fastened to the adjacent element. Never leave the array unattended during the installation process. As a general rule, L-ACOUSTICS® recommends the use of safety slings at all times.

10. Be cautious when ground-stacking a loudspeaker array

Do not stack the loudspeaker array on unstable ground or surface. If the array is stacked on a structure, platform, or stage, always check that the latter can support the total weight of the array. As a general rule, L-ACOUSTICS® recommends the use of safety straps at all times.

11. Take into account the wind effects on dynamic load

When a loudspeaker assembly is deployed in an open air environment, wind can produce dynamic stress to the rigging components and suspension points. If the wind force exceeds 6 bft (Beaufort scale), lower down and/or secure the loudspeaker array.

SYMBOLS

The following symbols are used in this document:



DANGER

This symbol indicates a potential risk of harm to an individual or damage to the product.

It can also notify the user about instructions that must be strictly followed to ensure safe installation or operation of the product.



OBLIGATION

This symbol notifies the user about instructions that must be strictly followed to ensure proper installation or operation of the product.



EQUIPMENT

This symbol indicates the equipment, tools, and spare parts required to perform a procedure.



INFORMATION

This symbol notifies the user about complementary information or optional instructions.



WELCOME TO L-ACOUSTICS®

Thank you for choosing the L-ACOUSTICS® ARCS® WIDE SYSTEM or ARCS® FOCUS SYSTEM.

This document contains essential information on rigging the system properly. Carefully read this document in order to become familiar with this procudures.

As part of a continuous evolution of techniques and standards, L-ACOUSTICS® reserves the right to change the specifications of its products and the content of its documents without prior notice.

Please check the L-ACOUSTICS® web site on a regular basis to download the latest documents: www.l-acoustics.com.

CONTENTS

I	RIGGING SYSTEM COMPONENTS	4
1.1	Loudspeaker enclosures	4
1.2	Rigging elements	4
1.3	Software application	4
2	MECHANICAL SAFETY	6
2.1	Maximum configurations	6
2.2	Assessing mechanical safety	
3	TECHNICAL DESCRIPTION	8
3.1	Flying	8
	3.1.1 WIFOLIFT	
	3.1.2 WIFOLIFTBAR	
4	SYSTEM SETUP	10
4.1	Ground-stacking	
	Horizontal	
	Horizontal stacked on SB18m	10
	Vertical stacked on SB18m	10
4.2	Flying	11
	Horizontal 2 or 4 enclosure	
	Horizontal 3, 5 or 6 enclosure	
	Vertical	
4.3	Pole-mounting	
	On feet or on top of SB18m	14
5	SUBSET PROCEDURES	15
PROC	EDURE A Locking a rigging bar (WIFORIG, SB18MRIG or WIFOLIFT)	15
PROC	EDURE B Using WIFOTILT to adjust ARCS WIDE/FOCUS site angle	
PROC	EDURE C Attaching a WIFOLIFTBAR	18
	5.1.1 Description	
	5.1.2 Tilt angle definition and rigging holes choice	
	5.1.3 Procedure	
	EDURE D Attaching a shackle or CLAMP250	
PROC	EDURE E Mounting the WIFOSOCK	24
APPE	NDIX A PULLBACK IMPLEMENTATION	25
A.	Vertical Array	
B.	Horizontal array	26
APPE	NDIX B TILT ANGLE REFERENCE CHARTS	27
APPE	NDIX C RECOMMENDED FLIGHT-CASE	31
APPE	NDIX D SPECIFICATIONS	32
ARCS	® FOCUS	32
ARCS ⁶	[®] WIDE	33
SB18n	n	34
CLAM	1P250	35
WIFO	BUMP	35
WIFO	LIFT	35
WIFO	LIFTBAR	36
WIFO	SOCK	36
WIFO	TILT	36

RIGGING MANUAL

VERSION 3.0

1 RIGGING SYSTEM COMPONENTS

The system approach developed by L-ACOUSTICS® consists in providing packaged solutions for loudspeaker system in order to guarantee the highest and most predictable level of performance at any step: modeling, installation, and operation. An L-ACOUSTICS® loudspeaker system is the set of components available to form any loudspeaker system based on one of the full-range loudspeaker enclosure afforded by L-ACOUSTICS®. It includes enclosures, rigging accessories, loudspeaker cables, amplified controllers, and software applications.

The main components involved in the rigging process of an ARCS® WIDE SYSTEM or ARCS® FOCUS SYSTEM are the following:

I.I Loudspeaker enclosures

ARCS® WIDE Full range enclosure, arrayable in a constant curvature line,

provided with 2 WIFORIG coupling bars.

ARCS® FOCUS Full range enclosure, arrayable in a constant curvature line,

provided with 2 WIFORIG coupling bars.

SB18m Subwoofer enclosure

provided with 2 SB18MRIG coupling bars.

1.2 Rigging elements

WIFOBUMP Frame for flying ARCS® WIDE/FOCUS or SB18m enclosures as a vertical array.

Provided with two bow shackles WLL I t.

WIFORIG Coupling bars dedicated to ARCS® WIDE and ARCS® FOCUS.

Equipped with the LOCKTAB locking tab.

Delivered with the enclosures.

SB18MRIG Coupling bars dedicated to SB18m.

Equipped with the LOCKTAB locking tab.

Delivered with the enclosure.

WIFOLIFT Bar for flying two, four, six or eight ARCS® WIDE/FOCUS enclosures as a horizontal array.

Provided with one bow shackle WLL I t and one connecting rod.

WIFOLIFTBAR Bar for flying three, five or six ARCS® WIDE/FOCUS enclosures as a horizontal array.

Provided with one bow shackle WLL I t.

WIFOSOCK Pole mount socket for an ARCS® WIDE/FOCUS enclosure.

CLAMP250 Truss clamp.

WIFOTILT Rigging accessory for stacking and tilting up to 4 ARCS WIFO on SB18m.

1.3 Software application

SOUNDVISION Proprietary 3D acoustical and mechanical modeling software.



Mechanical safety

Before any installation, model the system in SOUNDVISION and check the **Mechanical Data** section for any stress warnings.



Other ARCS® WIDE/FOCUS SYSTEM components

All the other components of the system are presented in the **ARCS**® **WIDE/FOCUS SYSTEM** user **manual**, document in which the loudspeaker configurations and connection are described.





Components involved in the rigging process of ARCS® WIDE SYSTEM / ARCS® FOCUS SYSTEM

RIGGING MANUAL

VERSION 3.0

2 MECHANICAL SAFETY

2.1 Maximum configurations

The ARCS® WIDE/FOCUS rigging system complies with 2006/42/EC: Machinery Directive. It has been designed following the guidelines of BGV-C1.

2006/42/EC: Machinery Directive specifies a safety factor of 4:1 against the rupture for flown deployments. The limits for flown deployments specified in the tables below correspond to a safety factor of 5:1 or higher.

The limits for stacked deployments correspond to safety factor of 1.8:1 or higher.

Refer to SOUNDVISION for the safety factor of a specific deployment.

The **safe configurations** are always compliant with the standards listed before, regardless of the chosen deployment parameters (site angles, inter-enclosure angles, etc.).

The **maximum configurations** correspond to the mechanical limit of the rigging accessories, before deploying these configurations always model the system in SOUNDVISION and check the **Mechanical Data** section for any stress warning or stability warning.

For mixed arrays always refer to your SOUNDVISION model.

Table	l Horizontal arrays	Safe	Maximum		
	WIFOLIFTBAR	5 ARCS® WIDE/FOCUS	6 ARCS® WIDE or 5 ARCS® FOCUS		
Flicing	WIFOLIFTBAR + CLAMP250	5 ARCS® WIDE/FOCUS	6 ARCS® WIDE or 5 ARCS® FOCUS		
Flying	WIFOLIFT	·			
	WIFOLIFT + CLAMP250	4 ARCS® WID	DE/FOCUS per WIFOLIFT		



6 ARCS® WIDE with WIFOLIFTBAR

When flying 6 ARCS® WIDE enclosures with the WIFOLIFTBAR, only use holes n° 2,3,4,5,6 of the WIFOLIFTBAR.

Table	2 Vertical arrays	Safe / Maximum
Flica	WIFOBUMP	8 ARCS® WIDE/FOCUS or 4 SB18m
Flying	WIFOBUMP + CLAMP250	6 ARCS® WIDE/FOCUS or 3 SB18m
	on ground	2 ARCS® WIDE/FOCUS
Ground-stacking	on SB18m	4 ARCS® WIDE/FOCUS
	WIFOTILT	4 ARCS WIDE/FOCUS



Maximum 4 ARCS® WIDE/FOCUS under SB18m

In a flown hybrid vertical configuration never attach more than four ARCS® WIDE/FOCUS enclosures under the SB18m subwoofers.



Mechanical safety of the rigging system

Before any installation, always model the system in SOUNDVISION and check the **Mechanical Data** section for any stress warning or stability warning.



2.2 Assessing mechanical safety

In order to assess the actual safety of any array configuration before implementation, refer to the following warnings:



Rated working load limit (WLL) is not enough

The rated WLL is an indication of the element resistance to tensile stress. For complex mechanical systems such as loudspeaker arrays, WLLs cannot be used per se to determine the maximum number of enclosures within an array or to assess the safety of a specific array configuration.



Mechanical modeling with SOUNDVISION

The working load applied to each linking point, along with the corresponding safety factor, will depend on numerous variables linked to the composition of the array (type and number of enclosures, splay angles) and the implementation of the flying or stacking structure (number and location of flying points, site angle). This cannot be determined without the complex mechanical modeling and calculation offered by SOUNDVISON.



Assessing the safety with SOUNDVISION

The overall safety factor of a specific mechanical configuration always corresponds to the lowest safety factor among all the linking points. Always model the system configuration with the SOUNDVISION software and check the **Mechanical Data** section to identify the weakest link and its corresponding working load. By default, a stress warning will appear when the mechanical safety goes beyond the recommended safety level.



Safety of ground-stacked arrays in SOUNDVISION

For ground-stacked arrays, a distinct stability warning is implemented in SOUNDVISION. It indicates a tipping hazard when the array is not secured to the ground, stage or platform. It is user responsibility to achieve full anchorage and to ignore this warning.



Consideration must be given to unusual conditions

SOUNDVISION calculations are based upon usual environmental conditions. A higher safety factor is recommended with factors such as extreme high or low temperatures, strong wind, prolonged exposition to salt water, etc. Always consult a rigging specialist to adopt safety practices adapted to such a situation.

RIGGING MANUAL

VERSION 3.0

3 TECHNICAL DESCRIPTION

3.1 Flying

The ARCS WIDE/FOCUS system can using WIFOLIFT or WIFOLIFTBAR depending on two factors:

- number of load-bearing lines,
- number of enclosures.

Follow the indications in this table to know which accessories to use:

	load-bearing line		2 load-bearing lines
2 or 4 ARCS WIDE / FOCUS	3 or 5 ARCS WIDE / FOCUS	6 ARCS WIDE	6 or 8 ARCS WIDE / FOCUS
I WIFOLIFT	2 WIFOLIFT + I WIFO	PLIFTBAR	2 WIFOLIFT

3.1.1 WIFOLIFT



Maximum of four enclosures per WIFOLIFT.


Always use I load-bearing line per pick-up point.

Only lift symmetrical arrays.

Each side of the array must mirror the other.



I WIFOLIFT

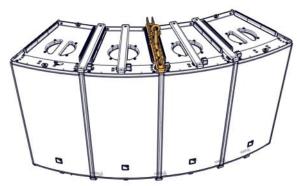



No bridled suspension on two WIFOLIFT bars.

Always use I load-bearing line per pick-up point.

2 WIFOLIFT









3.1.2 WIFOLIFTBAR



Only lift symmetrical arrays.
Each side of the array must mirror the other.


2 WIFOLIFT and I WIFOLIFTBAR

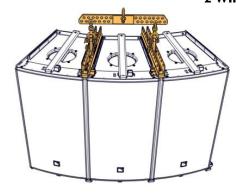

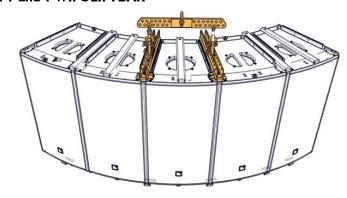



 $\label{eq:arcs} \textbf{ARCS}^{\$} \ \textbf{WIDE} \ \textbf{only}$ When used with 6 enclosures, the WIFOLIFTBAR is only compatible with ARCS $^{\$}$ WIDE.

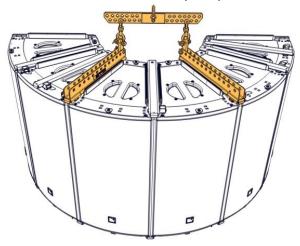


RIGGING MANUAL


VERSION 3.0

4 SYSTEM SETUP

4.1 Ground-stacking

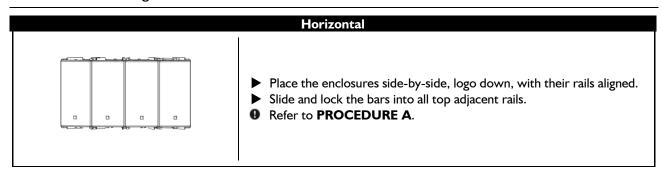

Horizontal stacked on SBI8m

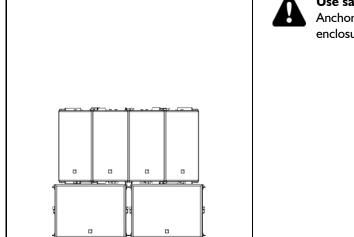


Use safety straps at all times.

Anchor the array since the ARCS WIDE / FOCUS enclosures are not secured to the SB18m.



- ► Stack SB18m horizontally or vertically, logo down.
- If SB18m enclosures are vertically stacked, attach them: refer to **PROCEDURE A**.
- ▶ Place the ARCS® WIDE/FOCUS enclosures on top of the subwoofers, side-by-side with rails aligned.
- ▶ Slide and lock the WIFORIG bars on the top adjacent ARCS® WIDE/FOCUS rails.
- Refer to PROCEDURE A.

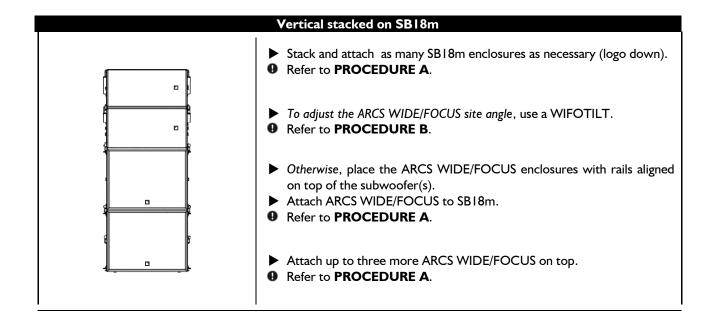



4.2 Flying



No bridled suspension on two WIFOLIFT bars.

Always use I load-bearing line per pick-up point.

Pullback implementation

By using rigging points at the rear of the installed coupling bars, an ARCS® WIDE/FOCUS horizontal or vertical array can be implemented in pullback configuration. Refer to **APPENDIX A PULLBACK IMPLEMENTATION**.

Final check before flying the system

<u>Coupling bars:</u> All lugs of locking tabs must be secured, as indicated in **PROCEDURE A**. <u>Shackles:</u> All safety pins must be secured as indicated in **PROCEDURE D**.



Truss clamping

By installing a CLAMP250 instead of a shackle, an array can be attached to a truss. Refer to **PROCEDURE D Attaching a shackle or CLAMP250**.



Horizontal 2 or 4 enclosure

- ▶ Place the enclosures in vertical position, side-by-side, logo down and rails aligned.
- Remove all top WIFORIG bars from their storage location.
- ► Install the WIFOLIFT bar(s). See **WIFOLIFT** p 8-9.
- Refer to PROCEDURE A.
- ▶ Slide and lock the WIFORIG bars into all top remaining adjacent rails.
- Refer to **PROCEDURE A**.
- ► Attach a shackle on each of the WIFOLIFT bars.
- Refer to PROCEDURE D.
- ► Slightly raise the array.
- ▶ Remove all bottom WIFORIG bars from their storage location.
- Slide and lock WIFORIG bars into all bottom adjacent rails.
- Refer to PROCEDURE A.

RIGGING MANUAL

VERSION 3.0




WIFOLIFTBAR positioning

Refer to WIFOLIFT on page 8-9.

Hybrid arrays

If you are implementing a hybrid configuration carefully follow the verification procedure outlined in **PROCEDURE C Attaching a WIFOLIFTBAR**

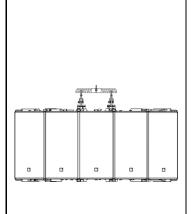

Horizontal 3, 5 or 6 enclosure

- ▶ Place the enclosures in vertical position, side-by-side, logo down and rails aligned.
- ▶ Remove all top WIFORIG bars from their storage location.
- ► Install the WIFOLIFT bar(s).
 See WIFOLIFT p 8-9 at the beginning of this section.
- Refer to PROCEDURE A.
- ▶ Slide and lock the WIFORIG bars into all top remaining adjacent rails.
- Refer to PROCEDURE A.
- ▶ Attach a WIFOLIFTBAR to the two WIFOLIFT.
- Refer to PROCEDURE C.
- ▶ Attach a shackle or a CLAMP250 to the WIFOLIFTBAR.
- Refer to PROCEDURE D.
- ► Slightly raise the array.
- ▶ Remove all bottom WIFORIG bars from their storage location.
- ▶ Slide and lock WIFORIG bars into all bottom adjacent rails.
- Refer to PROCEDURE A.





No bridled suspension on the WIFOBUMP frame

Always use I load-bearing line per pick-up point.

Pullback implementation

By using rigging points at the rear of the installed coupling bars, an ARCS® WIDE/FOCUS horizontal or vertical array can be implemented in pullback configuration. Refer to **APPENDIX A PULLBACK IMPLEMENTATION**.


Final check before flying the system

<u>Coupling bars:</u> All lugs of locking tabs must be secured, as indicated in **PROCEDURE A**. <u>Shackles:</u> All safety pins must be secured as indicated in **PROCEDURE D**.



Truss clamping

By installing a CLAMP250 instead of a shackle, an array can be attached to a truss. Refer to **PROCEDURE D**.

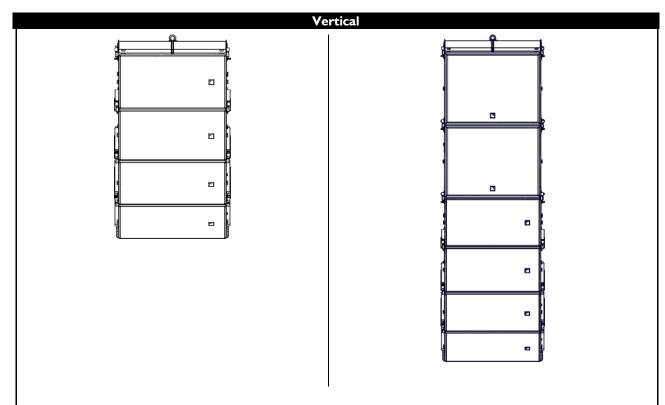


- ▶ Place the first enclosure (WIDE, FOCUS or SB18m) on the floor.
- For an array with 2 SB18m, place and lock a second SB18m on top of the first one.
- Refer to **PROCEDURE A** to lock the SB18MRIG bars.
- ▶ Remove the top coupling bars from their storage location.
- ▶ Place the WIFOBUMP frame on the top enclosure and lock the coupling bars.
 With an SB18m on top, refer to SOUNDVISION for the frame position (front or rear).
- Refer to PROCEDURE A to lock the coupling bars.
- ▶ Attach a shackle on the WIFOBUMP.
- Refer to **PROCEDURE D**.
- ▶ Raise the array so you are comfortable lifting and attaching the next enclosure.
- ▶ Bring the next enclosure and remove the bars from their storage location.
- ▶ With the rigging bar in hand, lift the next enclosure and attach it under the array.
- Refer to **PROCEDURE A** to lock the coupling bars.
- ► To add more enclosures, repeat the previous 3 steps until the array is completed.

RIGGING MANUAL

VERSION 3.0

4.3 Pole-mounting

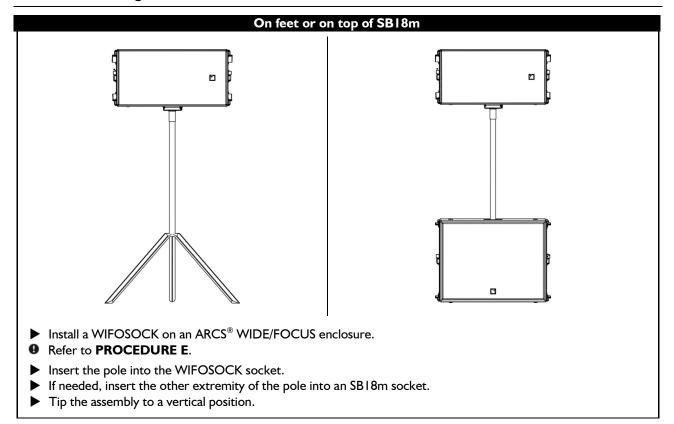



Dismantling the system

Identify the array to dismount and apply the associated System setup procedure in reversed order.



5 SUBSET PROCEDURES

PROCEDURE A

Locking a rigging bar (WIFORIG, SB18MRIG or WIFOLIFT)




Coupling bars and SB18m

Only use the longer SB18MRIG bars stored on the SB18m subwoofers to attach SB18m to another SB18m or to a WIFOBUMP.

The shorter WIFORIG bars do not ensure the mechanical safety of these connections.

- I. Remove the bar from its storage location.
- 2. From the front of the array, slide the bar into adjacent rigging rails.

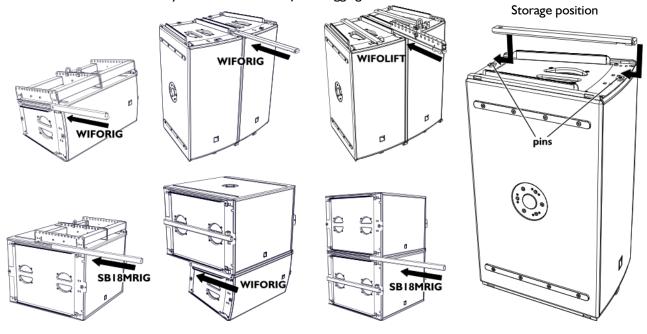



3. Secure the bar with the locking tab.

Accurately position the bar by pushing it into place.

When encountering difficulty, try to slide the tab from the other side.

Pinch the spring tongue and slide the locking tab until it snaps into place.

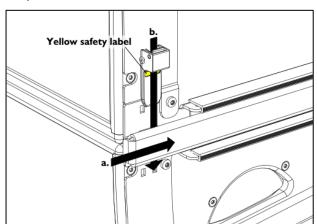

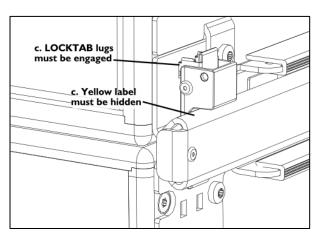

Λ

Always check that the yellow label is fully covered to ensure the locking tabs are fully engaged.


RIGGING MANUAL

VERSION 3.0


PROCEDURE B

Using WIFOTILT to adjust ARCS WIDE/FOCUS site angle


Remove the locking tabs and sling from WIFOTILT.

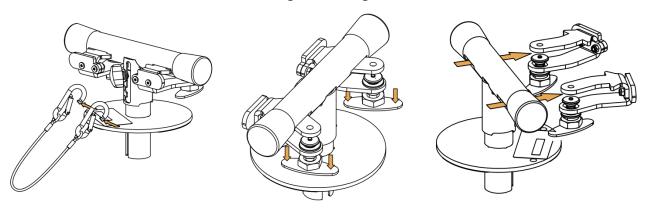


Adjust WIFOTILT angle.

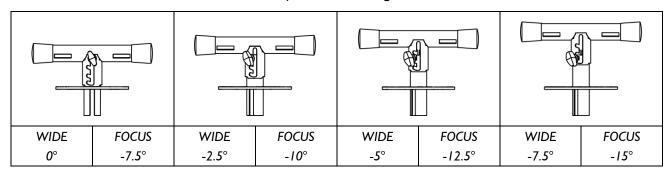


Loosen the knob.

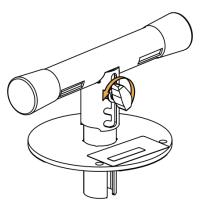

Select the angle and notch the corresponding slit on the knob screw.

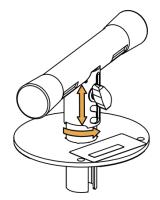


Turn the T-shape support and tighten the knob.

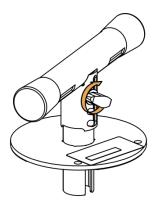





Position the first ARCS WIDE / FOCUS on the SB18m with rails aligned.


Slide the WIFOTILT tabs through the holes at the front of both enclosures rails.

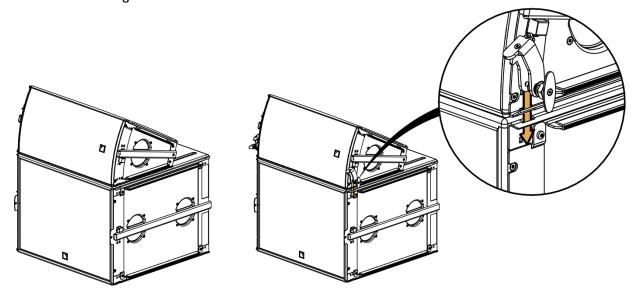

 Lift the back of ARCS WIDE / FOCUS and place the WIFOTILT in the SB18m pole socket.



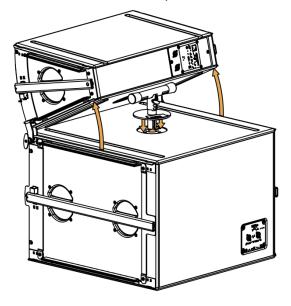

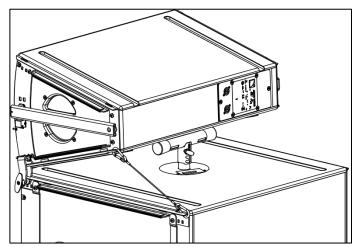

RIGGING MANUAL

VERSION 3.0

PROCEDURE C Attaching a WIFOLIFTBAR

5.1.1 Description

The WIFOLIFTBAR is a rigging accessory used to fly 3 or 5 ARCS® WIDE/FOCUS or 6 ARCS® WIDE.

It is used with two WIFOLIFT that are positioned on the array depending on the number of enclosures, **WIFOLIFT p** 8-9.

The WIFOLIFTBAR is composed of a metal bar with two rows of 15 holes and 2 swivel shackles. It can be used with a bow shackle WLL I t or a CLAMP250 attached to one of the two central holes. The swivel shackles can be attached the other 28 holes to connect the WIFOLIFTBAR to the two WIFOLIFT.

5.1.2 Tilt angle definition and rigging holes choice

The tilt angle of an array is defined by the holes selected on the WIFOLIFT.


For homogeneous arrays (ARCS® WIDE *or* FOCUS), refer to the <u>Tilt angle reference chart</u> on the next page to define which WIFOLIFT holes correspond to your target tilt angle and which WIFOLIFTBAR holes to use.

For example, rigging a three ARCS® FOCUS array on holes n° I on the WIFOLIFT yield a 26.5° positive angle and requires attaching the swivel shackles to holes n° 2 on the WIFOLIFTBAR.

For hybrid arrays (ARCS® WIDE *and* FOCUS), a trial-and-error process must be applied to define the appropriate WIFOLIFT and WIFOLIFTBAR holes.


The goal is to reduce the stress on the WIFOLIFT to a minimum:

- the rigging arm and the swivel shackle must be aligned
- the WIFOLIFT bar must remain parallel to the top of the array.

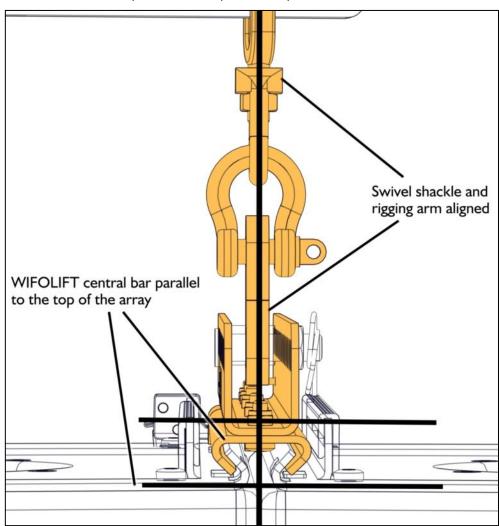



Tilt angle reference chart WIFOLIFTBAR

 

	3 ARCS® FOCUS	SUS	3 ARCS® WIDE	DE	5 ARCS® FOCUS	SUS	5 ARCS® WIDE	IDE	6 ARCS® WIDE	DE
WIFOLIFT hole	WIFOLIFTBAR HOLE	Tilt	WIFOLIFTBAR	Tilt angle	WIFOLIFTBAR HOLE	Tilt	WIFOLIFTBAR HOLE	Tilt	WIFOLIFTBAR HOLE	Tilt
-	2	26,5°	2	26,0°	2	32,3°	_	34,7°		
2	3	21,6°	3	21,8°	8	28,0°	2	30,9°		
3	3	١7,6°	4	°6'21	٤	24,4°	٤	27,5°		
4	4	13,4°	5	ا3,8°	4	20,4°	4	23,9°		
2	5	°0,6	9	°5′6	4	16,4°	5	20,2°		
9	5	4,8°	7	4,4°	5	12,1°	9	16,3°		
7	9	0,2°	8	۱,۱°	3	7,8°	7	12,4°		
8	9	-4,4°	6	-3,2°	9	3,3°	6	8,2°		
6	7	-8,9°	10	-7,4°	9	-1,3°	01	4,0°	2	5,1°
01	7	-13,1°	Ξ	-11,7°	7	-5,7°	Π	-0, I°	3	1,4°
П	8	-17,3°	12	-15,7°	7	-10,0°	12	-4,3°	4	-2,2°
12	8	-21,4°	13	-19,7°	8	-14,4°	13	-8,8°	5	-5,7°
13	6	-25,0°	4	-23, I°	8	-18,2°	14	-12,5°	9	-9,3°

		= not applicable
--	--	------------------

RIGGING MANUAL

VERSION 3.0

5.1.3 Procedure

If you are raising a hybrid array (ARCS® WIDE and FOCUS), follow these steps:

1. Select the WIFOLIFT and WIFOLIFTBAR holes to define a starting point.

The values given in the Tilt angle reference chart can be used as a guideline.

Select the array which composition is the closest to your hybrid array and use the indicated WIFOLIFT and WIFOLIFTBAR.

For example, to reach a 0,2° tilt angle with an array of 2 ARCS® WIDE and 1 ARCS® FOCUS, refer to the 3 ARCS® WIDE array and use WIFOLIFT hole n° 7 and WIFOLIFTBAR hole n° 8.

- 2. Attach two swivel shackles to the indicated holes on a WIFOLIFTBAR.
- 3. Attach the WIFOLIFTBAR to the indicated hole on the two WIFOLIFT.
 - a. Attach a rigging arm to the selected hole on each WIFOLIFT by driving and securing the pierced bolt.
 - b. Pass the U-shaped part of the shackle through the swivel shackle loop.
 - c. Attach the bow shackle to the arm.
 - d. Secure the shackle.
- 4. Raise the array so you can measure the angle.

If you are not satisfied, lower the array to the ground and adjust the angle by picking another hole.

If you are satisfied with the angle, continue.



Risk of fall.

The WIFOLIFT must be parallel to the top of the array. Any other situation creates mechanical stress and can cause the WIFOLIFT to pop out.

5. Verify that the central bar of the two WIFOLIFT is parallel to the top of the array.

If it is parallel, the array is ready.


If it is not parallel, follow these steps:

- a. Lower the array to the ground.
- b. Change the swivel shackles rigging holes on the WIFOLIFTBAR so that the rigging arm and the swivel shackle form a straight line.
- c. Repeat step 5 until the central bar of the WIFOLIFT is parallel to the top of the array.

If you are raising an homogeneous array,

- 1. Select the appropriate WIFOLIFT and WIFOLIFTBAR holes using the <u>Tilt angle reference chart</u> on the previous page
- 2. Attach two swivel shackles to the indicated holes on a WIFOLIFTBAR.
- 3. Attach the WIFOLIFTBAR to the indicated hole on the two WIFOLIFT.
 - a. Attach a rigging arm to the WIFOLIFT hole by driving and securing the pierced bolt.
 - b. Pass the U-shaped part of the shackle through the swivel shackle loop.
 - c. Attach the bow shackle to the arm.
 - d. Secure the shackle.



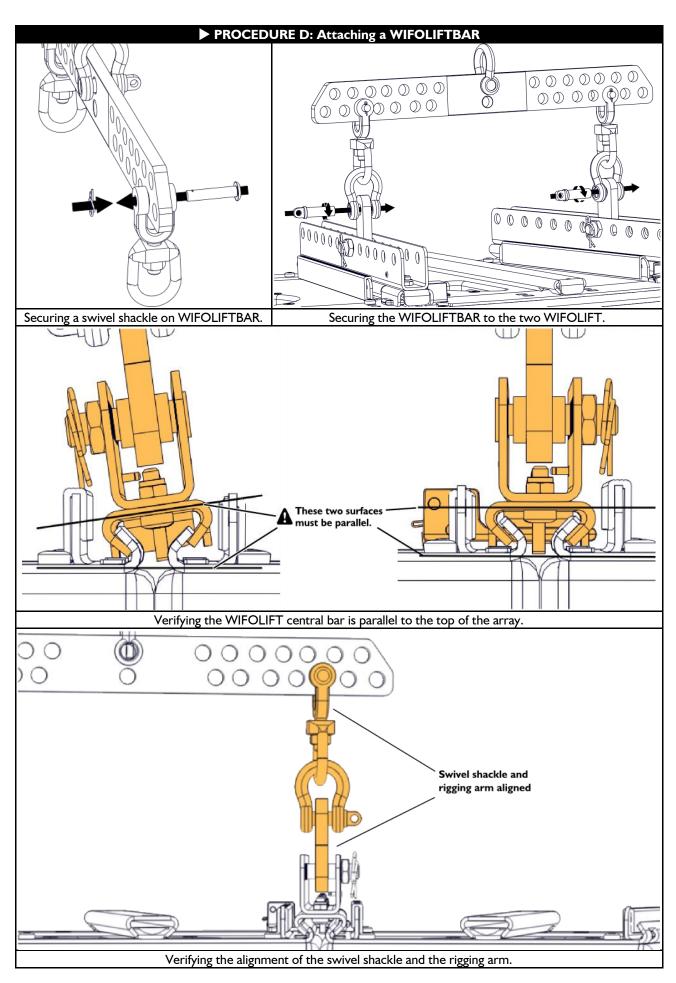


RIGGING MANUAL

VERSION 3.0

PROCEDURE D Attaching a shackle or CLAMP250

1. Refer to **SOUNDVISION** modeling or to the table in **APPENDIX B TILT ANGLE REFERENCE CHART** to identify the hole that corresponds to the targeted tilt angle.

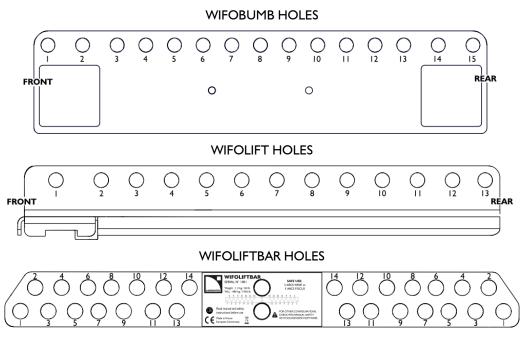



About site angle

Since many variables can affect the actual site angle, it is recommended to use an inclinometer.


Attach and secure a shackle or a CLAMP250 to the identified hole, by driving the pierced bolt.


With a CLAMP250, install safety slings between the KIBU-SB and the truss.

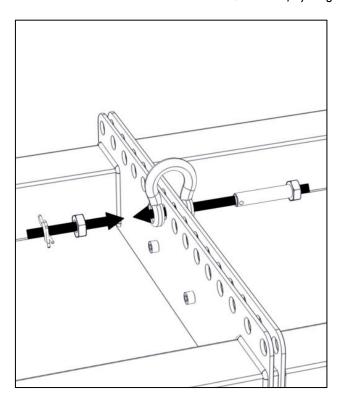


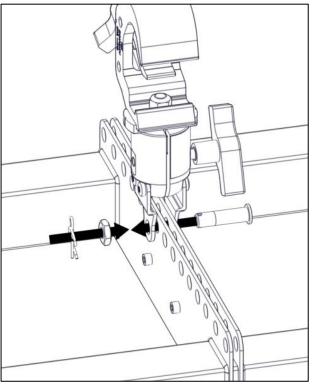




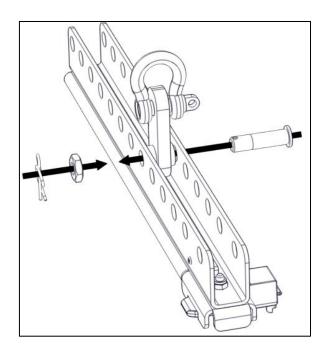

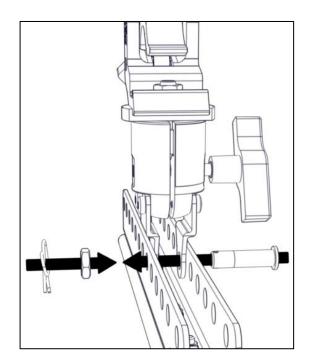

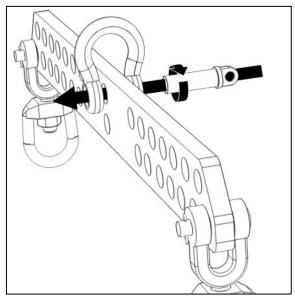

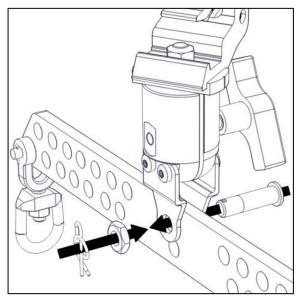


RIGGING MANUAL


VERSION 3.0

PROCEDURE E Mounting the WIFOSOCK

Remove the pin from the angle hole.

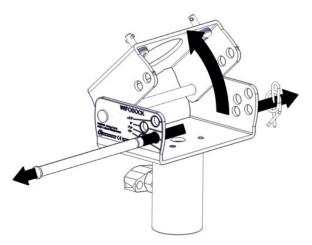


Secure the WIFOSOCK by applying a quarter-turn rotation to the three screws, with a coin or a screwdriver.

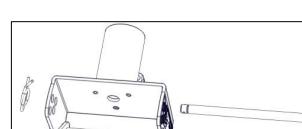



Place the WIFOSOCK onto the socket receptacle of the

enclosure.

Insert the pin into the appropriate angle hole.

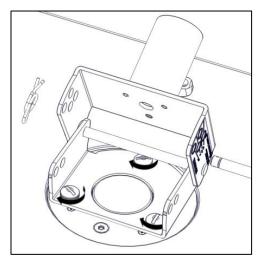

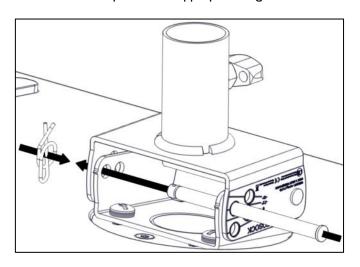

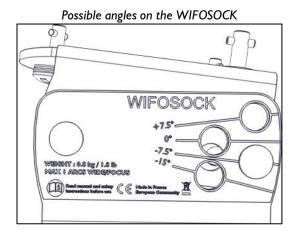

Selected angle on	Realized	site angle
WIFOSOCK	ARCS® WIDE	ARCS® FOCUS
-15,0°	0,0°	-7,5°
-7,5°	7,5°	0,0°
0,0°	15,0°	7,5°
7,5°	22,5°	15,0°




APPENDIX A PULLBACK IMPLEMENTATION

A. Vertical Array



Maximum configurations.

2 or 4 ARCS® WIDE/FOCUS enclosures array for 1 WIFOBUMP frame. 6 or 8 ARCS® WIDE/FOCUS enclosures array for 2 WIFOBUMP frames.

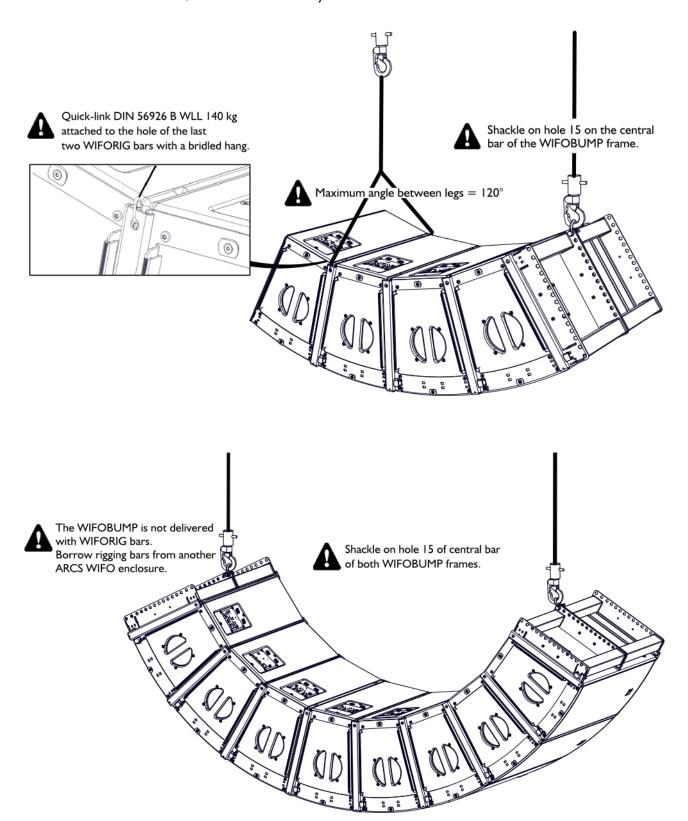

RIGGING MANUAL


VERSION 3.0


B. Horizontal array



Maximum configurations.

2 or 4 ARCS® WIDE/FOCUS enclosures array for 1 WIFOLIFT. 3 or 5 ARCS® WIDE/FOCUS enclosures array for 2 WIFOLIFT and 1 WIFOLIFTBAR.

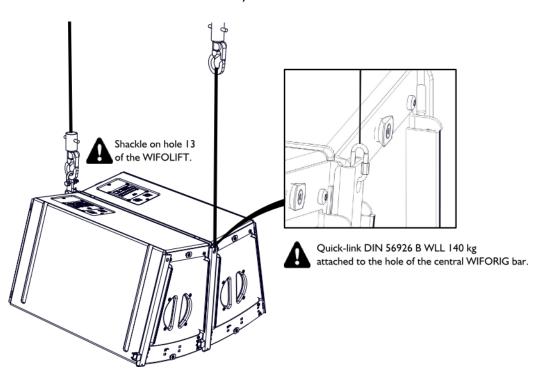


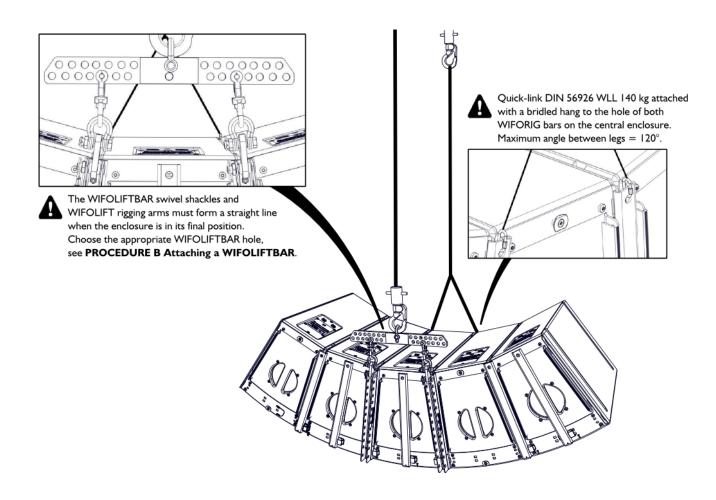



APPENDIX B

 TILT ANGLE REFERENCE CHARTS




Tilt angle reference chart WIFOLIFT

					-					ARI	-		
8 ARCS® WIDE	، ۱ . 8۱	.4°	13,2°	°0,11	°8'8	°5'9	4,2°	°6'I	-0,4°	-2,7°	-5,0°	-7,3°	°E'6-
8 ARCS® FOCUS	27,0°	22,8°	ا9,3°	15,7°	12,0°	8,2°	4,2°	°£'0	-3,7°	-7,6°	-11,4°	-15,2°	-18,5°
6 ARCS® WIDE	33,1	29,5	26,5	23,4	20,0	9'91	13,0	6,3	5,5	1,7	-2,2	0'9-	5,6-
6 ARCS® FOCUS	37,3	33,7	30,6	27,3	23,8	20,1	16,2	12,2	8,1	3,8	-0,5	-4,8	-8,7
4 ARCS® WIDE	33,4°	29,1°	25,5°	21,6°	ا7,6°	13,3°	°6'8	4,4°	-0,2°	-4,7°	-9,3°	-13,7°	°9′21-
4 ARCS® FOCUS	30,7°	26,1°	22,3°	18,2°	14,0°	°9'6	5, I°	°5′0	-4,I°	-8,6°	-13,1°	-17,4°	-21,2°
2 ARCS [®] WIDE	26,6°	21,6°	ا7,5°	ا3,1°	8,7°	4,1°	°5'0-	-5,2°	°L'6-	-14,2°	-18,4°	-22,5°	-26,1°
2 ARCS® FOCUS	26,4°	21,3°	۱7,2°	12,9°	8,4°	3,8°	-0°6	-5,5°	-10,1°	-14,5°	-18,8°	-22,9°	-26,4°
WIFOLIFT hole	_	2	٤	4	3	9	7	8	6	01	=	12	13

RIGGING MANUAL

VERSION 3.0


Tilt angle reference chart WIFOLIFTBAR

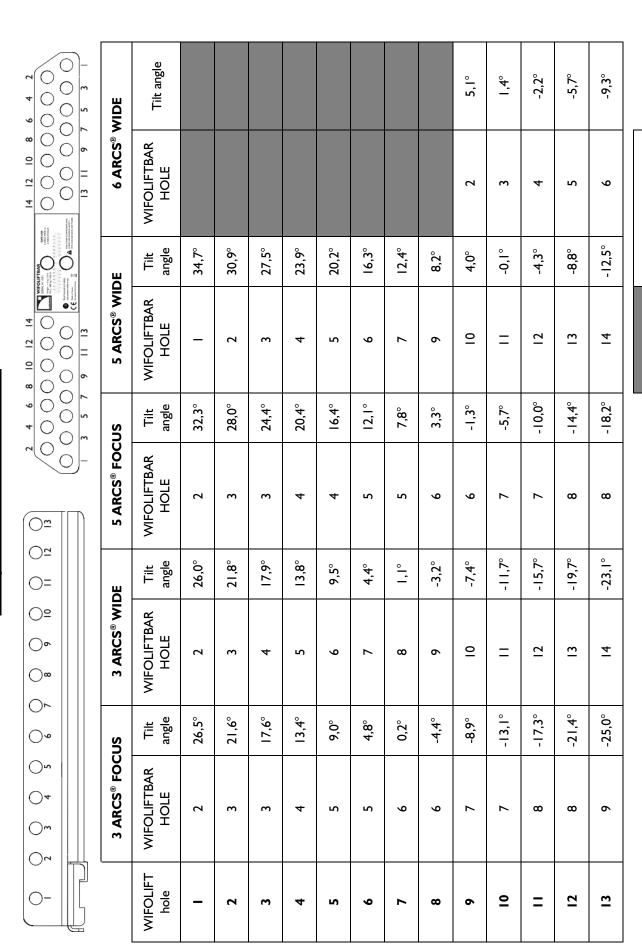

= not applicable



 Tilt angle reference chart WIFOBUMP (homogeneous arrays)



WIFOBUMP hole	I ARCS® FOCUS	I ARCS® WIDE	2 ARCS® FOCUS	2 ARCS® WIDE	4 ARCS® FOCUS	4 ARCS® WIDE	6 ARCS® FOCUS	6ARCS® WIDE	8 ARCS® FOCUS	8 ARCS® WIDE
_	47,9°	51,4°	35,4°	43,0°	32,3°	48,1°	°0,06	°0,08	43,8°	71,8°
2	43,0°	46,6°	31,6°	39,3°	30,1°	46,0°	58,7°	58,7°	42,7°	71,1°
3	°1,78	40,7°	27,4°	35,2°	27,8°	43,8°	57,4°	57,4°	41,6°	70,3°
4	°5,18	34,9°	23,8°	31,4°	25,8°	41,8°	56,2°	56,2°	40,6°	°9,69
5	25,1°	28,2°	19,9°	27,2°	23,7°	39,7°	54,9°	54,9°	°9,68	°8,8
9	°6,71	20,5°	15,8°	°8,22	21,6°	37,5°	53,6°	°9,83	°9,8£	°0,89
<i>L</i>	،2'0I	°6'11	11,5°	°0,81	.4°	35, I°	52,2°	52,2°	°9,7£	67,2°
8	2,0°	2,8°	7, I°	12,9°	17,1°	32,5°	°9′05	°9,05	36,5°	66,2°
6	-6,2°	-6,5°	2,6°	°L'L	14,8°	29,8°	49,0°	°0,64	35,4°	65,2°
01	-14,2°	-15,4°	-1,9°	2,3°	12,4°	27,0°	47,2°	47,2°	34,3°	64,1°
П	-21,7°	-23,7°	-6,4°	-3,2°	°0,01	23,9°	45,3°	45,3°	33,1°	62,9°
12	-28,4°	-31,0°	-10,8°	-8,5°	7,6°	20,8°	43,3°	43,3°	32,0°	61,7°
13	-34,5°	-37,3°	-15,1°	-13,8°	5, I°	١7,5°	41,1°	41,1°	30,7°	60,2°
14	-40,7°	-43,8°	-20,1°	-19,8°	2,1°	I 3,4°	38,3°	38,3°	29,2°	58,4°
15	-46,0°	-49,1°	-24,7°	-25,4°	°0,1-	6'ا،	35,3°	35,3°	27,6°	56,3°

= not applicable with the CLAMP250

RIGGING MANUAL

VERSION 3.0

	AR-	
a		
Tilt angle reference chart WIFOBUMP (hybrid arrays)	○ 4	
id a	_ =	
ybr	2	
IP (=	
Š	2	
<u>G</u>	0°	
×	○∞	
hart	0^	
9	0. 0	
ren	0 20	
refe	O 4	
ıgle	O m	
Tilt aı	0,	
• •	O-[<u>‡</u>]	
	<u> </u>	_

	2 SB18m and 4 ARCS® FOCUS	ARCS® FOCUS	2 SB18m and 4	BI8m and 4 ARCS® WIDE	I SB18m and 2 ARCS® FOCUS	ARCS® FOCUS	I SBI8m and 2 ARCS® WIDE	ARCS® WIDE
WIFOBUMP hole	Front position	Rear position	Front position	Rear position	Front position	Rear position	Front position	Rear position
_	ا 6,8 °	4,5°	20,7°	7,3°	24, I°	°6,0	26,6°	2,4°
2	15,4°	3,0°	ا6'ا _°	°9,6	21,5°	-2, I°	24,0°	-0,8°
3	14,0°	l,4°	17,6°	3,9°	°6,81	-5,0°	21,3°	-3,9°
4	12,8°	0,1°	16,3°	2,4°	16,7°	-7,5°	.0,0'l	-6,6°
5	۱۱,5°	۰۱٬۱۰	°0′51	°0,1	14,4°	°6,9-	°9,91	°1,9-
9	00,3°	-2,4°	13,6°	-0,4°	12,1°	-12,2°	۱4,2°	-11,7°
7	°0,0	-3,7°	12,3°	-I,8°	9,7°	-14,6°	11,7°	-14,2°
8	7,8°	°0,5-	°6'01	-3,3°	7,3°	-16,9°	9,1°	-16,6°
6	°5'9	-6,3°	°5′6	-4,7°	4,8°	°1,91-	°5'9	°0,61-
01	5,3°	-7,5°	8,1°	-6, I°	2,4°	-21,3°	3,9°	-21,3°
П	4,0°	°8,8°	6,7°	-7,5°	-0°I°	-23,4°	١,3°	-23,6°
12	2,7°	°0,01-	5,3°	°6'8-	-2,6°	-25,4°	-1,3°	-25,8°
13	°4,1	-11,3°	3,9°	-10,3°	°0.5-	-27,4°	-3,9°	-27,9°
14	-0,1°	-12,7°	2,1°	-12,0°	-8,0°	-29,7°	-7, I°	-30,3°
15	-1,7°	-14,2°	0,4°	°9′81-	°6'01-	-31,9°	-10,2°	-32,6°




APPENDIX C RECOMMENDED FLIGHT-CASE


It is recommended to use a dedicated flight-case capable to fit 2 ARCS® WIDE/FOCUS enclosures in vertical position. Both the tray and cap should feature a foam insert cut according to the pattern illustrated below. This one allows for the different enclosure combinations: 2 ARCS® WIDE, 2 ARCS® FOCUS or I ARCS® WIDE / I ARCS® FOCUS.





Cap and tray of the flight-case

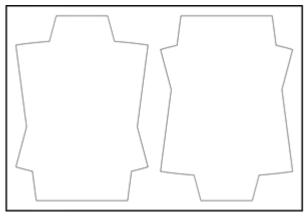

Pattern of the foam insert for the cap and the tray

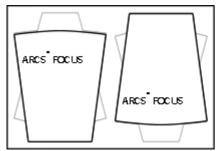

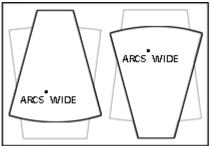

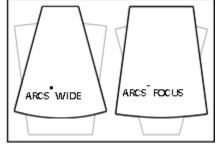

Storage options

RIGGING MANUAL

VERSION 3.0

APPENDIX D SPECIFICATIONS

ARCS® FOCUS

Description	2-way passive	enclosure, amplified by LA4 or LA8
Usable bandwidth	(-10 dB) 55 Hz - 20 kHz	z ([ARCS_WIFO] preset)
Maximum SPL ¹	1	S_WIFO] preset)
Coverage angle (-6	dB) 15° × 90°	
	LF I × 3" diaph	nragm compression driver, DOSC® waveguide.
Transducers	HF I × I2", w	eather-resistant, bass-reflex.
Nominal impedanc	e LF = 8 Ω	
RMS power handli		
Connectors	IN: I × 4-point LINK: I × 4-po	•
Rigging component	Rigging rails an	d WIFORIG rigging bars.
Dimensions	36	444 mm / 15.5 in 252 mm / 9.9 in 35 mm / 14.4 in 39 kg / 94 lb
	8 ()	38 kg / 84 lb
		Baltic birch plywood. Grey brown RAL 8019® or Pure white RAL 9010®
Physical data		Steel grill with anti-corrosion coating, Airnet® fabric
		IP45
		High strength steel with anti-corrosion coating
	Rigging component:	i iigii sa ciigai sicei wiai aiia-coi osion coatilig

¹ Peak level at 1 m under free field conditions using 10 dB crest factor pink noise with specified preset.



ARCS® WIDE

.		1 10 11 144 145		
Description		2-way passive enclosure, amplified by LA4 or LA8		
Usable bandwidth (55 Hz - 20 kHz ([ARCS_WIFO] preset)		
Maximum SPL ¹	\ <u>-</u>	I 35 dB ([ARCS_WIFO] preset)		
Coverage angle (-6	,	30° × 90°		
Transducers		LF I \times 3" diaphragm compression driver, DOSC® waveguide.		
		HF I \times I2", weather-resistant, bass-reflex.		
Nominal impedance		8Ω		
RMS power handling	0	450 W		
Connectors		pint SpeakOn®		
		LINK: I × 4-point SpeakOn®		
Rigging component	s Rigging rails	Rigging rails and WIFORIG rigging bars.		
Dimensions 140 mm / 5.5 in 365 mm / 14.4 in Weight (net): 38 kg / 84 lb				
Physical data	Cabinet: Finish: Front: Protection Rating:	Baltic birch plywood. Grey brown RAL 8019® or Pure white RAL 9010® Steel grill with anti-corrosion coating, Airnet® fabric IP45		
	Rigging component:	5		

Rigging component: High strength steel with anti-corrosion coating

1 Peak level at 1 m under free field conditions using 10 dB crest factor pink noise with specified preset.

RIGGING MANUAL

VERSION 3.0


SB18m

Description		Subwoofer enclosure, amplified b	by LA4 or LA8	
Low frequency limit (-10 dB)		32 Hz ([SB18_100] preset)		
Maximum SPLI		136 dB ([SB18] preset)		
RMS power handling		700 W		
Transducers		I × 18" weather resistant, dual bass-reflex		
Nominal impedance		8 Ω		
Connectors		IN: I × 4-point SpeakOn [®] LINK: I × 4-point SpeakOn [®]		
Rigging components		Rigging rails and two SB18RIG rigging bars.		
Dimensions		759 mm / 29.9 in BOTTOM	717 mm / 28.2 in	
_	Veight (net)			
	Cabinet:	Baltic birch plywood		
	inish:	Grey brown, RAL 8019 [®] or Pure white, RAL 9010 [®] RAL code on special order		
Physical data F	ront:	Steel grill with anti-co Airnet® acoustically r	orrosion coating	
F	Protection R	n Rating: IP45		
	Rigging comp	ponent: High strength steel		


¹ Peak level at 1 m under half-space conditions using 10 dB crest factor pink noise with specified preset.




CLAMP250

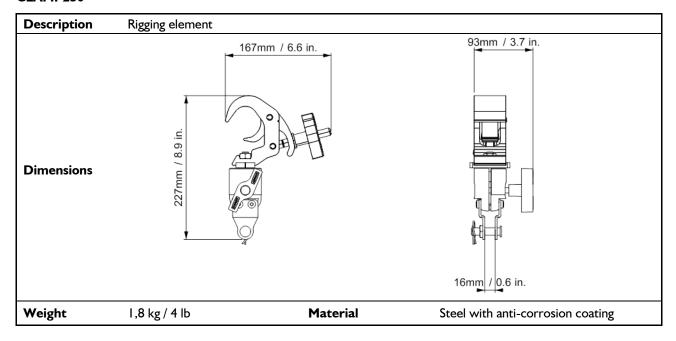

WIFOBUMP

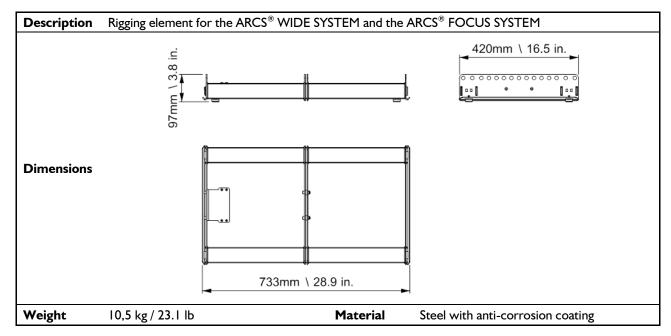


WIFOLIFT

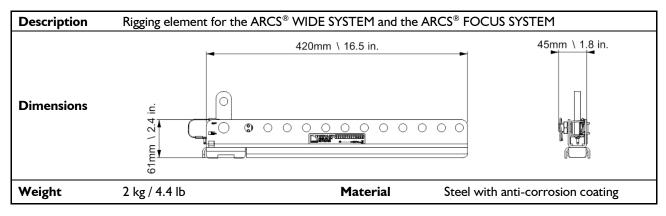


RIGGING MANUAL

VERSION 3.0


WIFOLIFTBAR

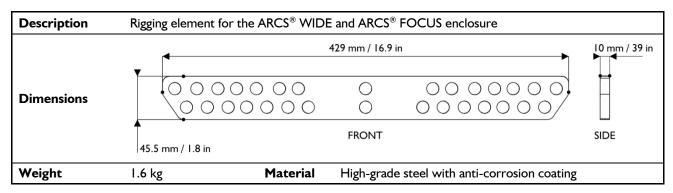

WIFOSOCK

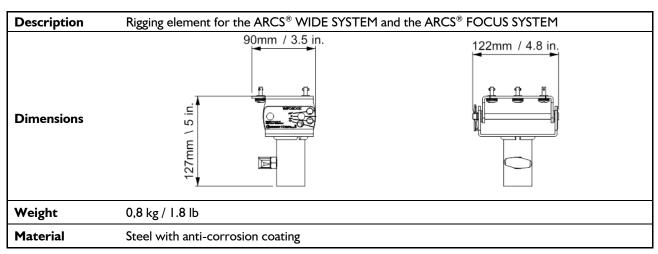

WIFOTILT

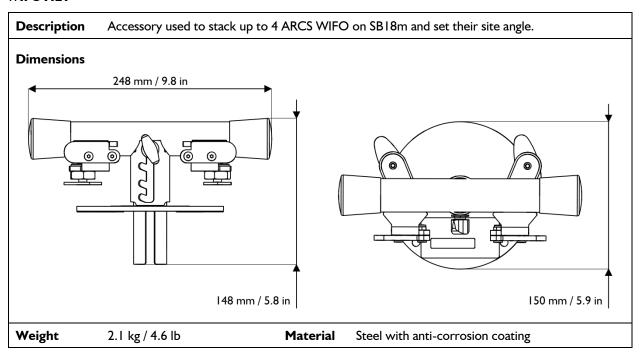



Document reference: ARCSWIFO_RM_EN_3.0 Distribution date: August 4, 2014

@ 2014 L-ACOUSTICS $^{\text{@}.}$ All rights reserved.

No part of this publication may be reproduced or transmitted in any form or by any means without the express written consent of the publisher.