

Quick Start Guide

TC ELECTRONIC POLYTUNE 3

USB - Connects to your computer for firmware updates.

Display Mode - Choose between Needle or Strobe tuning modes for guitar (G) or bass (B).

Display - Pick one string for single-string tuning, or strum all of the strings for polyphonic tuning.

Output

Footswitch - Turns the tuner on and off. Press and hold the footswitch to toggle between standard and drop-D tuning.


Power Output - Supply power to other daisy-chained pedals.

Power Input - Connect a 9V / >100 mA power supply.

Tuning Mode - Select standard tuning or one of several dropped tuning or capo modes.

Ambilight Sensor - Detects the strength of the surrounding light and automatically adjusts the display brightness.

Input

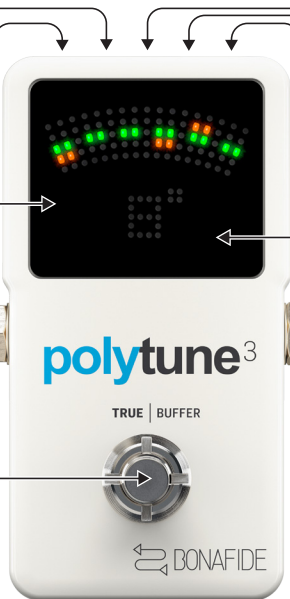

Switching between True Bypass and Buffered Bypass

Unscrew the back plate of the pedal and look for the two small DIP-switches in the upper left corner.

Switch configuration	Mode
Both switches set to the left	True Bypass
Top switch set to the right Lower switch set to the left	Buffered Bypass
Both switches set to the right	Buffered Bypass Display Always On

Visit tcelectronic.com to download the full manual