

Quick Start Guide

TC ELECTRONIC POLYTUNE 3 NOIR

True Bypass / Buffered Bypass – Choose between Bypass modes:

| Switch configuration | Mode |
|--|------------------------------------|
| Both switches set to OFF | True Bypass |
| Switch 1 set to ON Switch 2 set to OFF position | Buffered Bypass |
| Both switches set to ON | Buffered Bypass, Display Always On |

Display - Pick one string for single-string tuning, or strum all of the strings for polyphonic tuning.

Output

Footswitch - Turns the tuner on and off. Press and hold the footswitch to toggle between standard and drop-D tuning.



Tuning Mode - Select between standard "E" or one of the dropped tuning or capo modes. Press and hold to switch between chromatic and strobe mode.

Power Input - Connect a 9 V / >100 mA power supply.

Input

Visit tcelectronic.com to download the full manual

tc electronic