

EIKON



EKD8



SPECIFICATIONS

| | |
|--------------------|------------------|
| Transducer type | Dynamic |
| Polar pattern | Super - Cardioid |
| Frequency response | 50 – 18.000 hz |
| Sensitivity | -74 ±3dBv/μbar |
| Max Spl for 1% THD | 137 dB |
| Impedance | 300 Ω |
| Load impedance | 1000 Ω |
| Connector | 3-pin xlr male |
| Weight | 279 gr. |
| Dimension | L.182 Ø 52,5 mm |

FEATURES

- Super -cardioid polar pattern
- High gain before feedback
- Rugged construction
- Advanced double shock-mount construction
- Frequency response tailored for vocals, with brightened midrange and bass roll-off to control proximity effect
- 4 year warranty

APPLICATIONS



- Optimized for all vocal applications, this mic specifically controls proximity effect through its low-frequency roll-off, making it a great choice for all performers like DJ's, male and female singers, announcers. The EKD8 minimizes handling noise without compromising sound quality, thanks to capsule's rugged double shock-mount system.

SAFETY INFORMATION

- Protect the microphone from moisture and sudden impact. You could either injure yourself or other or damage the microphone.
- Do not blow into the microphone, and avoid knocking on the microphone grille. To check the function of the microphone you should speak into the microphone or scratch the microphone grille gently.

FREQUENCY RESPONSE

The frequency response curve (± 3 dB) correspond to a typical production sample for this microphone.

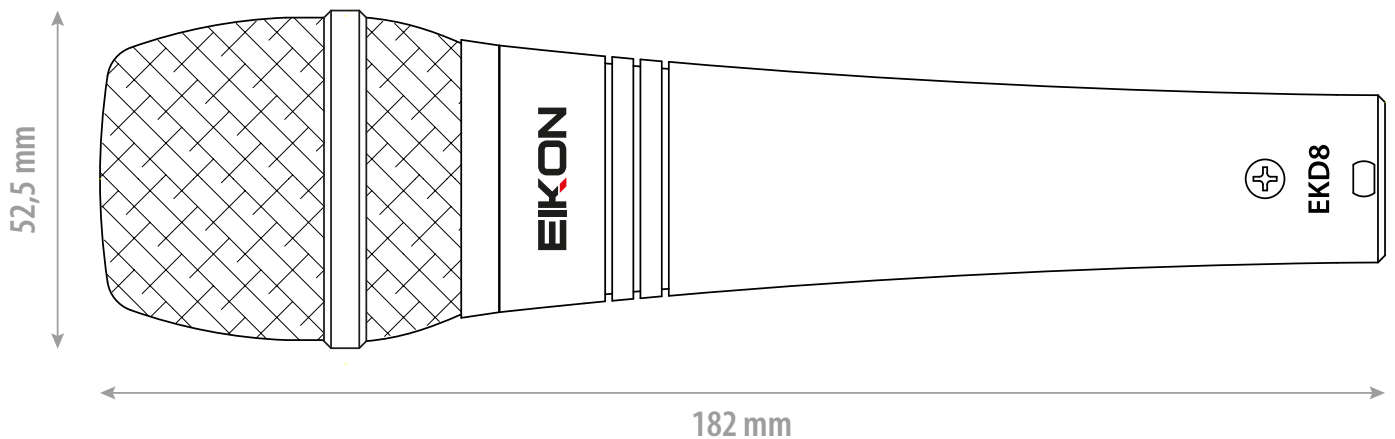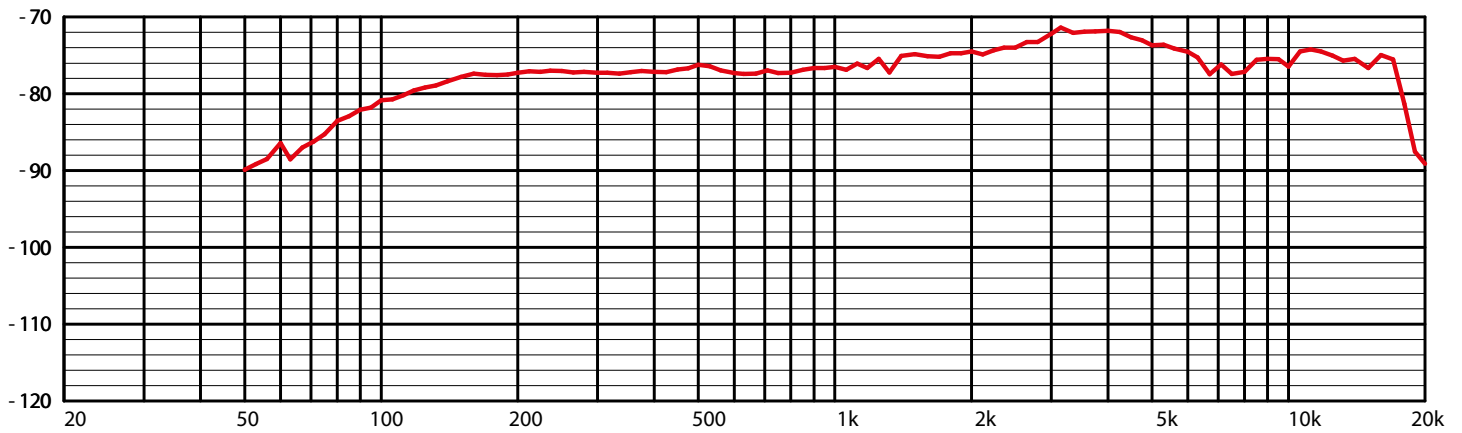

WARRANTY

This microphone is under warranty for a period of 4 years to be free of defects in material and workmanship. In the event of a product failure due to materials or workmanship, Proel will repair or replace said product at no charge with proof of purchase. Proel does not pay or reimburse shipping costs for warranty repairs or returns. The warranty excludes any causes other than manufacturing defects, such as normal wear, abuse, environmental damage, shipping damage or failure to use or maintain the product per the supplied instructions. No Implied Warranties: All implied warranties, including but not limited to implied warranties of merchantability and fitness for a particular purpose are hereby excluded. The liability of Proel, if any, for damages relating to allegedly defective products shall be limited to the actual price paid by Dealer for such products and shall in no event include incidental or consequential damages of any kind. A Return Authorization is required before returning any product. Other than this warranty, proel makes no warranties, express or implied, with respect to the products, the use of the products, the performance of the products. Proel shall not be liable for special incidental, consequential, indirect or similar damages arising from or based on the sale, use, storage or disposal of the products, proel's service work, breach of warranty, breach of contract. Negligence, or any other theory of liability, even if proel has been advised of the possibility of such damages.

ITALY

Proel Lab Spa
Acquaviva Picena

UK

Proel International Ltd.
London

KOREA

Proel Korea Co. Ltd.
Gyeonggi-Do

MALAYSIA

Proel Malaysia Snd. Bhd.
Petaling Jaya

USA

Proel North America Inc.
Los Angeles

TUNISIE

Proel Tunisia Sarl
Tunisi

PROEL SPA

(Worldwide Headquarters)
Via alla Ruenia, 37/43
64027 Sant'Omero (TE) - ITALY
Tel. +39 0861 81241
Fax +39 0861 887862
P.I. 00778590679
N.Reg.AEE IT 08020000002762

info@proel.com
www.proel.com

